


**THRUSTMASTER**  
**F-16 TQS™**  
**BUTTON REFERENCE**

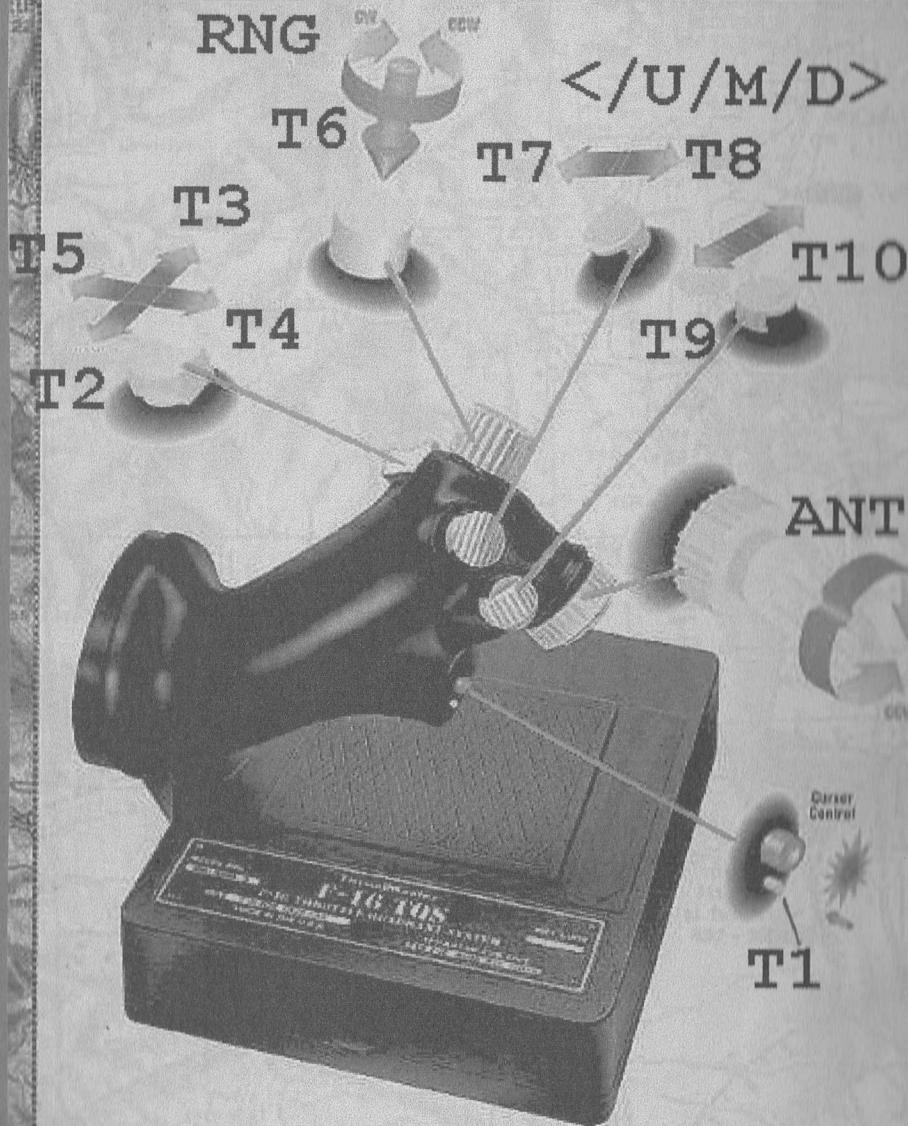

## Throttle Quadrant System (TQS) Owner's Manual

### Setting up the TQS

The ThrustMaster TQS .....	3
System considerations .....	3
Installing the hardware .....	4
Installing the ThrustWare software .....	5
Preparing the TQS for use .....	6
Testing the TQS .....	7
Can I go mix it up with a MiG now? .....	9
Using the TQS as a mouse .....	10
Throttle calibration .....	10
TQS layout diagram .....	11

### Customizing the TQS

Overview— How the controls work .....	12
Analog/digital controls .....	13
Analog versus digital controls .....	13
Device types and character output .....	14
Type 1 digital device: repeating character generation ..	14
Type 2 digital device: sequential character generation ..	15
Type 3 digital device: continuous character generation ..	16
Statement descriptions .....	17
ANT (antenna knob) .....	17
BTN (button action) .....	19
JSX (joystick x-axis input) .....	20
JSY (joystick y-axis input) .....	21
MT (minimum throttle) .....	22
RDDR (rudder) .....	23
REM (remark or comment) .....	24
RNG (range knob) .....	24
THR (throttle input) .....	25
~ (tilde) .....	29